



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy


tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 1 di 11

REQUIREMENTS FOR ASSEMBLY, USE AND MAINTENANCE OF CLIMBING LADDER

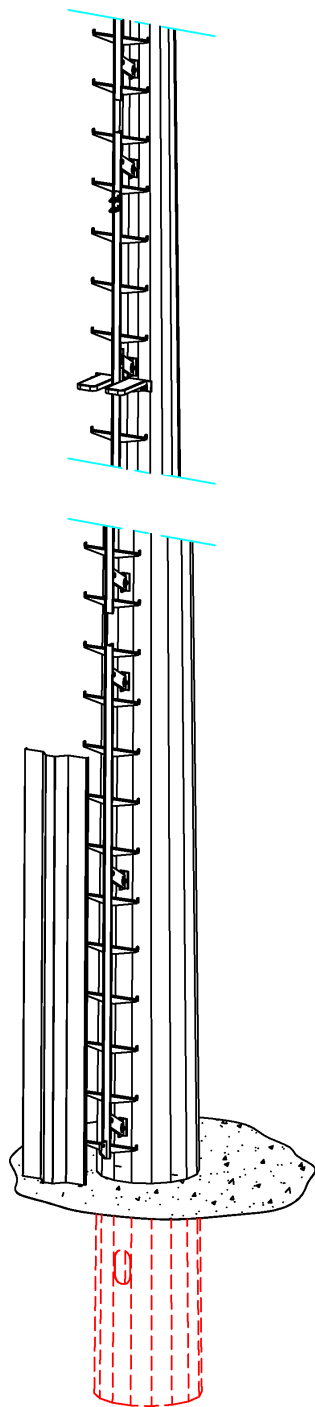



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 2 di 11

SUMMARY

1. ASSEMBLY REQUIREMENTS	3
2. REQUIREMENTS FOR TIGHTENING BOLTS	9
3. MAINTENANCE AND DISMANTLING	11

ATTACHED ANCHOR LIFE-LINE + ANTI-FALL SAFETY DEVICE MANUAL

IMPORTANT: This document concerns the installation, use and maintenance of climbing ladders.
IN ADDITION TO THE FOLLOWING INSTRUCTIONS, ALWAYS REFER TO THE WORKSHOP DRAWINGS PROVIDED UPON ORDERING, WHICH MAY CONTAIN ADDITIONAL INFORMATION RELATING TO SPECIFIC CASES AND TO “ANCHOR LIFE-LINE AND ANTI-FALL SAFETY DEVICE VERTICAL LINE 353-1 MANUAL”

Before assembling the stairs, it is necessary to correctly insert the sections of the mast until they are fully inserted. The methods of joining polygonal sections are contained in the manual ***“REQUIREMENTS FOR JOINING POLYGONAL SECTIONS”***.



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 3 di 11

1. ASSEMBLY REQUIREMENTS

To install stair sections along the shaft of the mast, it is necessary to refer to the workshop drawings.

Place the last section of the ladder at the upper part of the mast. The ladder must protrude from the top of the mast by a distance 'X' as indicated in the workshop drawings (fig. 1).

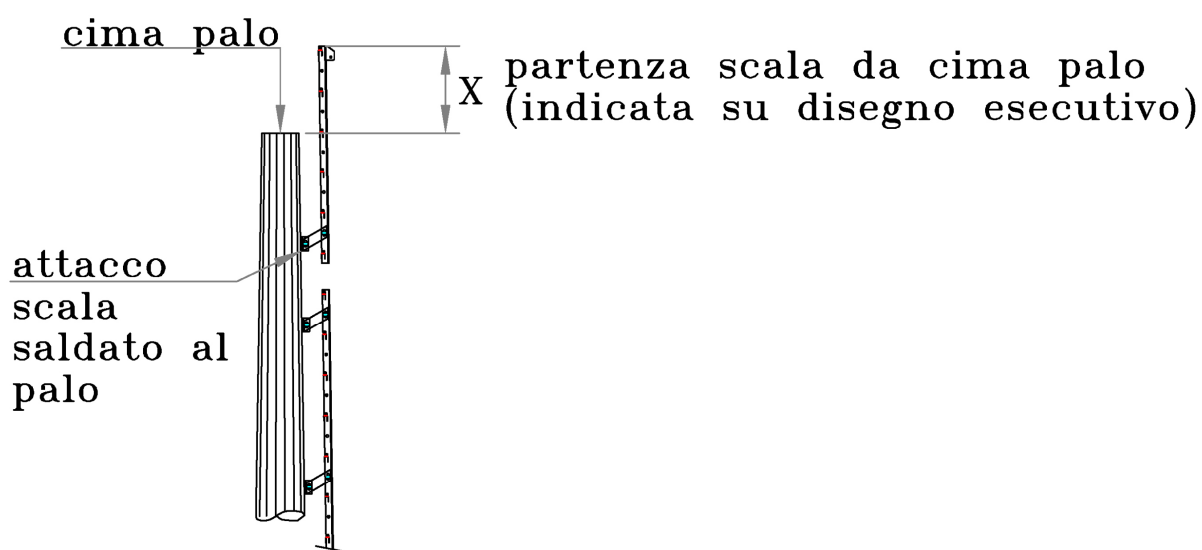


fig.1

The fixing of the ladder to its supports welded to the pole (ladder connections) is carried out using, for each support:

- N° 2 fixing devices
- N° 2 screws M14x40
- N° 4 washers
- N° 2 medium nuts M14 (fig. 2)

The necessary hardware is supplied separately.


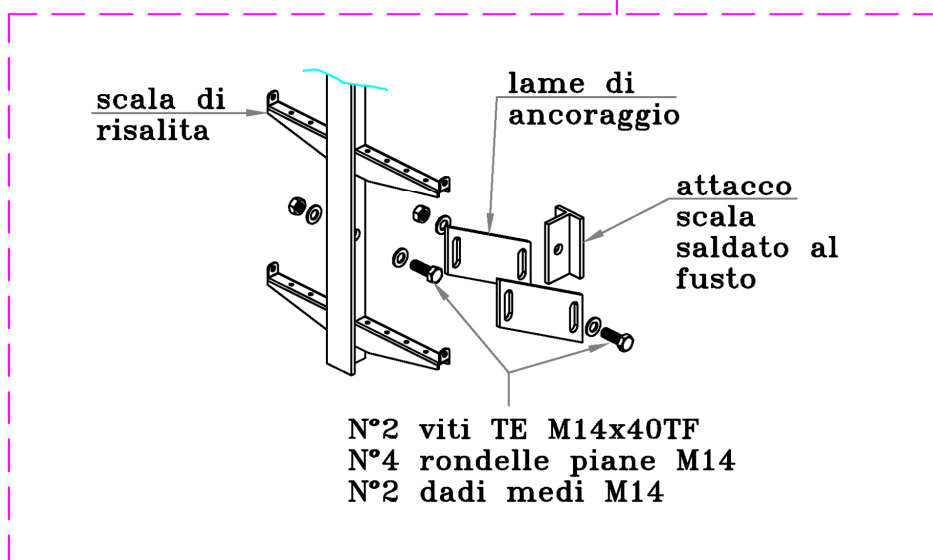


fig.2

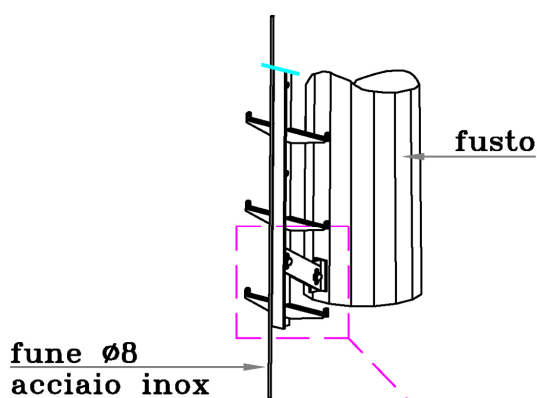

PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 5 di 11

Then continue installing the other ladder sections along the shaft in the same way as described above.

NOTE: When assembling the various ladder sections, it is necessary to respect the indications contained in the workshop drawings: the ladders must be interrupted for a distance of 290 mm between each rung (fig. 3).

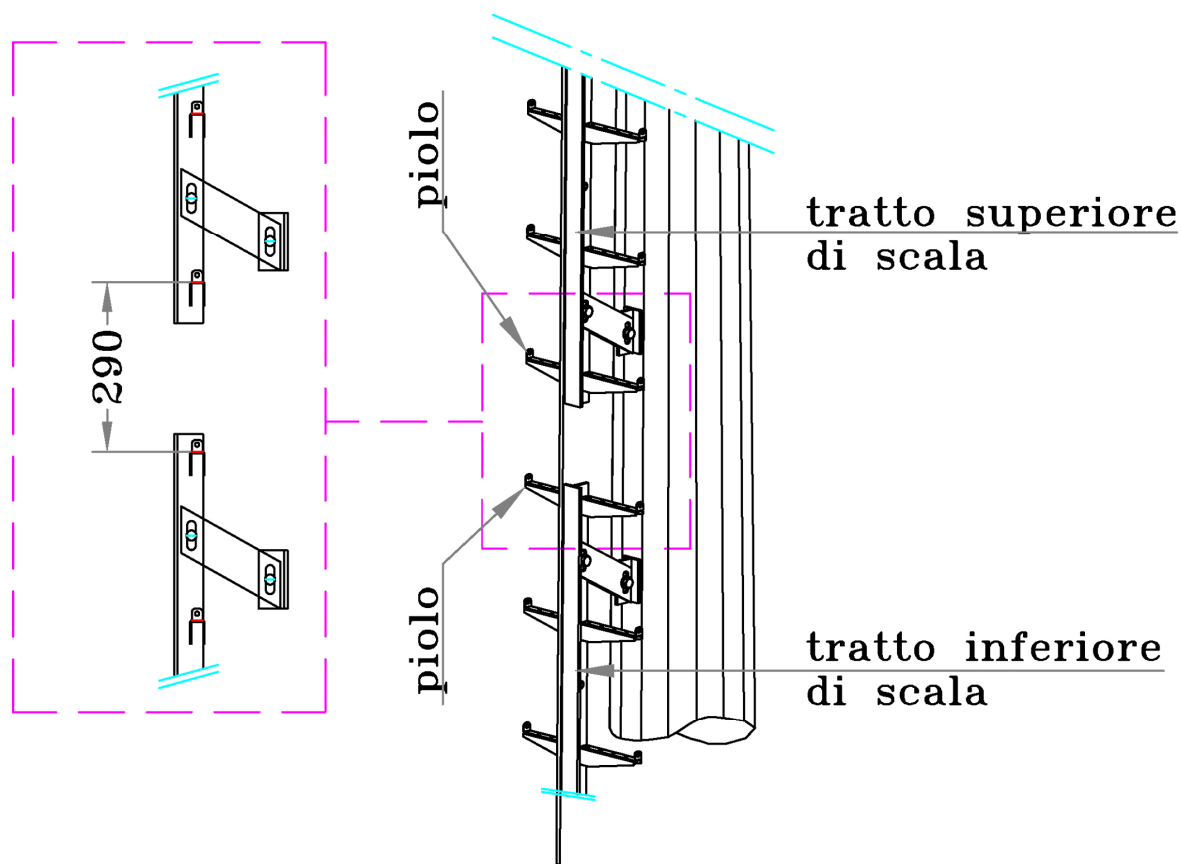


fig.3



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 6 di 11

Install, at the heights specified in the workshop drawing, the intermediate rope lock anchor devices, which have to be installed in groups of N°2 pieces (fig. 4).

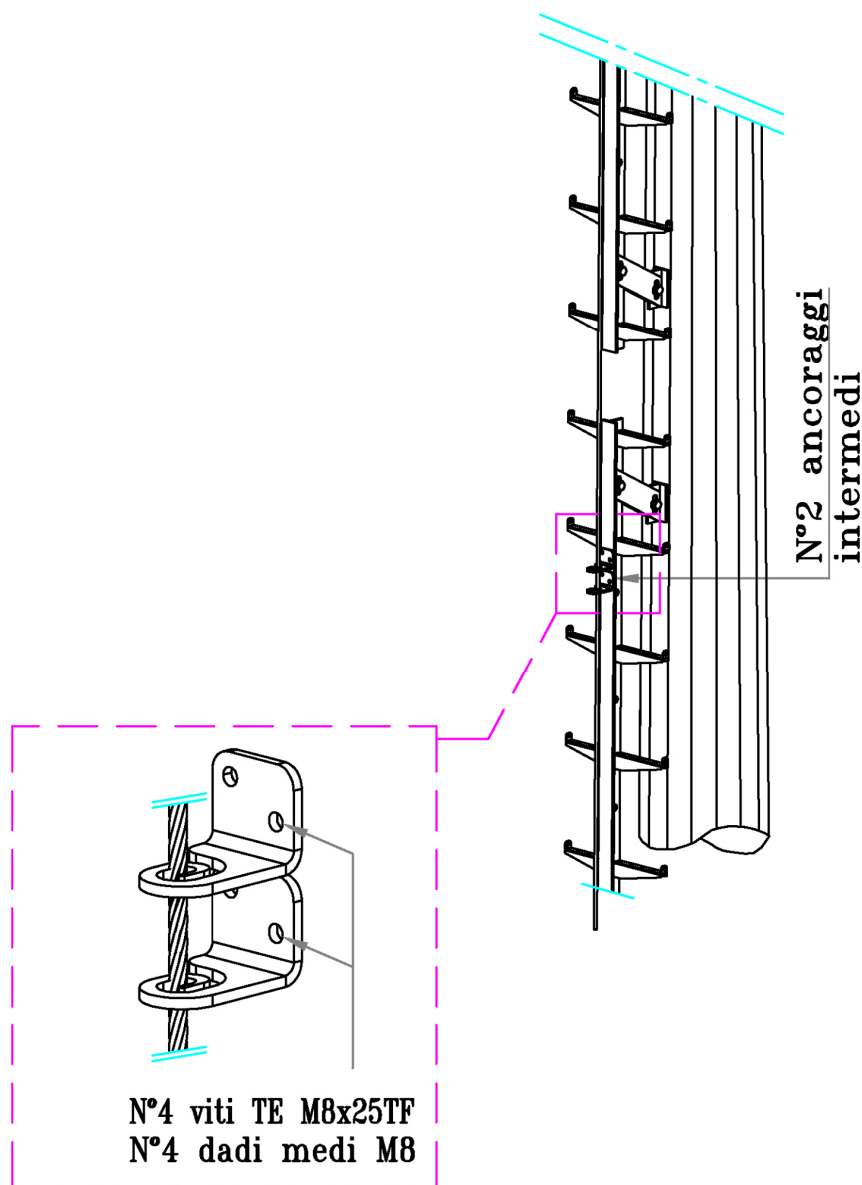


fig.4



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 7 di 11

Install, at the heights specified in the workshop drawings, the collapsible resting footboards using, for each footboard, n° 1 screw M14x40 and n° 1 nut M14 supplied separately (fig. 5).

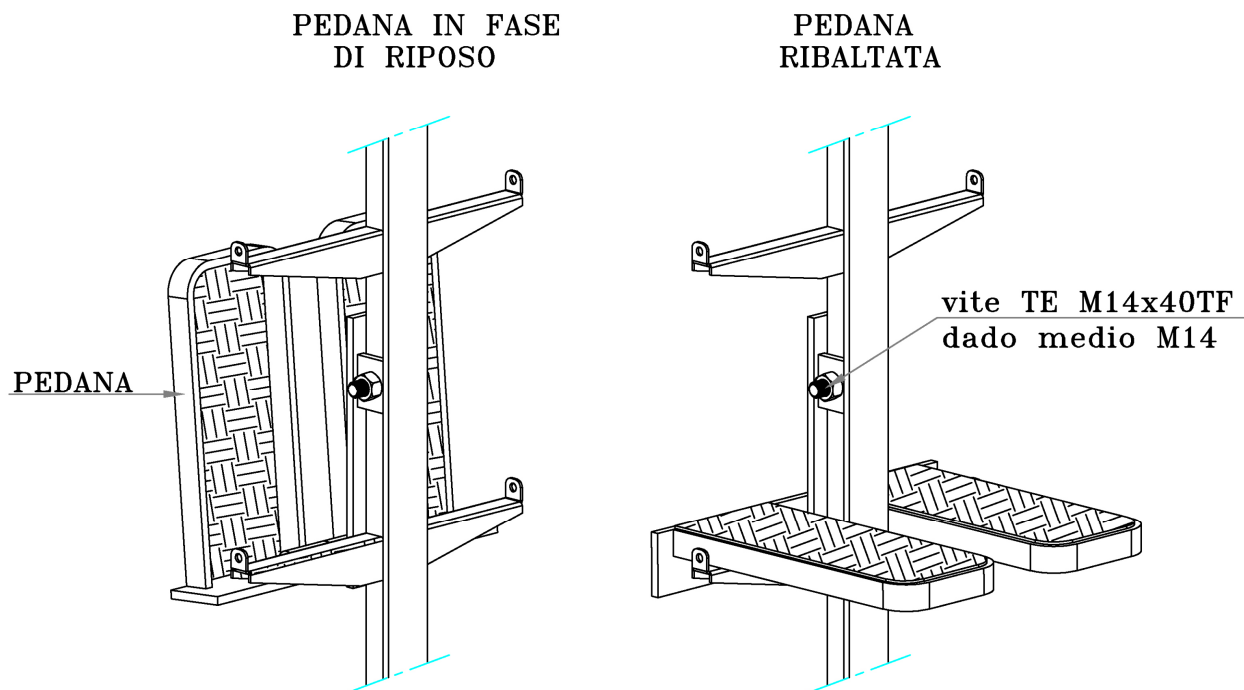


fig.5

Install the safety rope referring to “ANCHOR LIFE-LINE AND ANTI-FALL SAFETY DEVICE VERTICAL LINE 353-1 MANUAL” in attachment.

WARNING! The anti-fall safety devices used on climbing ladders with safety ropes are personal protective equipment (PPE) with a life cycle beyond which it is mandatory to replace them. The device's life cycle is defined in the use and maintenance manual supplied with the device itself. Furthermore, before using the anti-fall safety devices, it is mandatory to carefully read the user manual as it contains instructions for their correct use, such as maximum load capacity (weight of the operator and tools), types of checks to be carried out before use, installation and use procedures.

The anti-fall safety devices must be used with a suitable harness.



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 8 di 11

Each tower comes with N°1 anti-climb cover that prevents unauthorized personnel from accessing the ladder.

The upper end of the anti-climb cover must be positioned at a height of 3 m from the cat-walk (fig. 6).

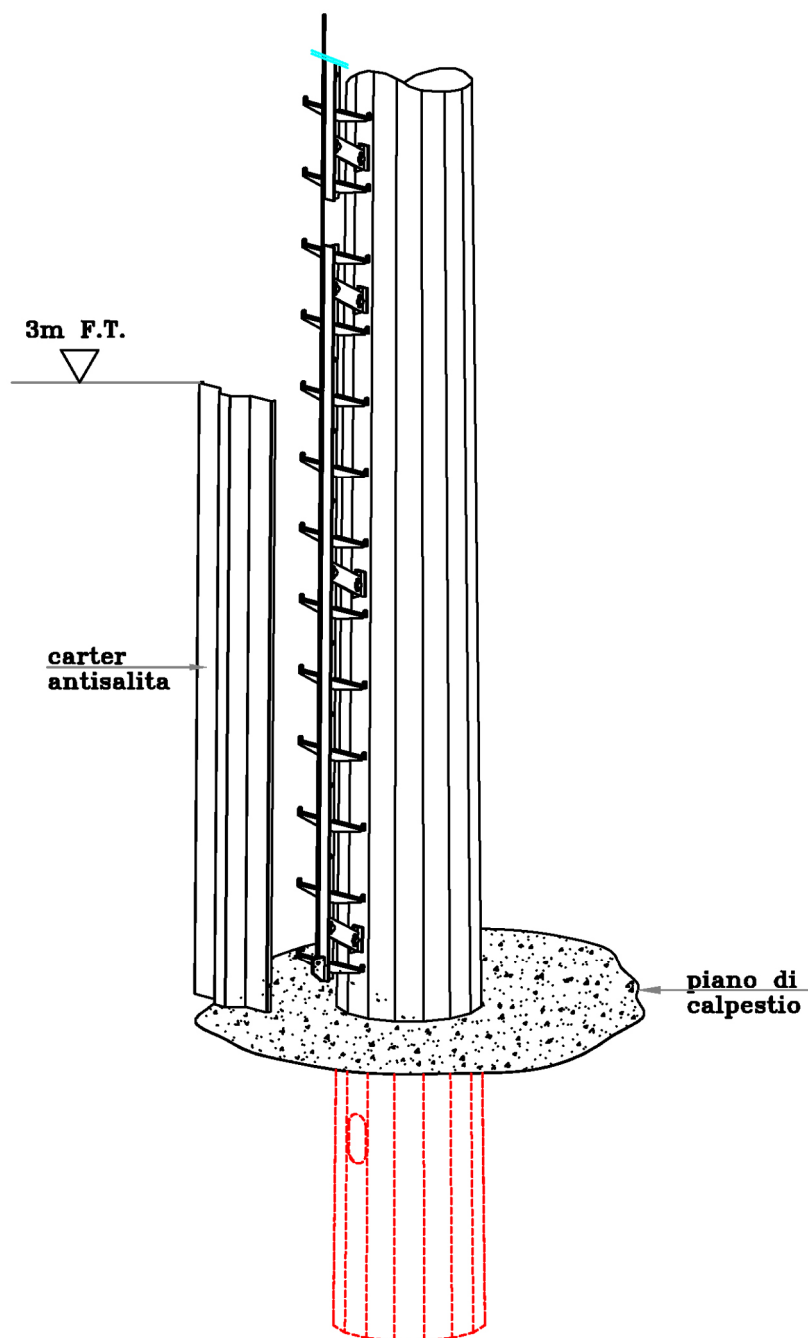


fig.6



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 9 di 11

Each anti-climb cover has an adhesive label that must be filled in by the installer using a permanent marker.

TARGA NORMATIVA etichetta adesiva da compilare

ID PL SONO A CARICO DELL'UTILIZZATORE THE P.P.E. ARE IN CHARGE OF THE USER	
- Utilizzare i dispositivi di sicurezza solo dopo aver letto e compreso il manuale d'uso. - Use the safety devices only after having carefully read and understanding the instructions of use. - Non utilizzare il dispositivo di sicurezza se non è stata effettuata la regolare ispezione. - Do not use the safety device if the regular inspection has not been carried out. - Richiedere il fascicolo tecnico contenente l'elaborato grafico della struttura, la procedura di utilizzo e i requisiti relativi al DPI. - Ask the technical dossier including the technical drawing of the structure, the procedure of use, the type and the requirements about the p.p.e.	
SCALA DESIGNAZIONE: Scala senza gabbia UNI 11962:2024-S1-150	
MODELLO	Conformità alla norma
INSTALLATO	CONFORMITY
TIPO S1	UNI 11962:2024
H SCALA H LADDER	
N° di serie	
ANNO DI FABBRICAZIONE	
DATA DI INSTALLAZIONE	
LINEA VITA	
Modello	Conformità alla norma
MODEL	CONFORMITY
Vertical wire line	UNI 353-1:2018
N° di serie	
DATA DI INSTALLAZIONE	
Dispositivo anticaduta rimovibile	
Produttore	Modello
PRODUCITOR	MODEL
Sisal Safety	art DA
DATI INSTALLATORE INSTALLER'S DETAILS	
PER INSTALLAZIONE-USO E MANUTENZIONE FARE RIFERIMENTO AL MANUALE ISTRUZIONE	
www.palicampion.it	





PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 10 di 11

ADHESIVE LABEL DETAIL

I D.P.I. SONO A CARICO DELL'UTILIZZATORE THE P.P.E. ARE IN CHARGE OF THE USER	
- Utilizzare i dispositivi di sicurezza solo dopo aver letto e compreso il manuale d'uso - Use the safety devices only after having carefully read and understanding the instructions of use - Non utilizzare il dispositivo di sicurezza se non è stata effettuata la regolare ispezione - Do not use the safety device if the regular inspection has not been carried out - Richiedere il fascicolo tecnico contenente l'elaborato grafico della struttura, la procedura di utilizzo e i requisiti relativi ai D.P.I. - Ask the technical dossier including the technical drawing of the structure, the procedure of use, the type and the requirements about the p.p.e.	
SCALA DESIGNAZIONE: Scala senza gabbia UNI 11962:2024-S1-150	
MODELLO INSTALLATO INSTALLED MODEL	Conformità alla norma CONFORMITY
TIPO S1	UNI 11962:2024
H SCALA H LADDER	XXXX
N° di serie SERIAL N°	(ODP)
Anno di fabbricazione PRODUCTION YEAR	XXXX
Data di installazione DATE OF INSTALLATION	
LINEA VITA	
Modello MODEL	Conformità alla norma CONFORMITY
Vertical wire line	UNI 353-1:2018
N° di serie SERIAL N°	XXXX
Data di installazione DATE OF INSTALLATION	
Dispositivo anticaduta rimovibile	
Produttore PRODUTOR	Modello MODEL
Sial Safety	art.DA
DATI INSTALLATORE INSTALLER'S DETAILS	
PER INSTALLAZIONE-USO E MANUTENZIONE FARE RIFERIMENTO AL MANUALE ISTRUZIONE	
www.palicampion.it	

COMPILATI DA
UFFICIO TECNICO

DA COMPILARE A CURA
DELL'INSTALLATORE

COMPILATO DA
UFFICIO TECNICO
DA COMPILARE A CURA
DELL'INSTALLATORE

DA COMPILARE A CURA
DELL'INSTALLATORE



PALI CAMPION srl

Via A. De Gasperi, 45 • 45025 Fratta Polesine (RO) • Italy

tel + 39 0425 668686 • mail@palicampion.it

www.palicampion.it



www.palicampion.it – assemblaggio, uso, manutenzione scale su torri – rev 202509 – Pag. 11 di 11

2. REQUIREMENTS FOR TIGHTENING BOLTS

The bolts must be tightened to the following tightening torques:

Bolt type	Tightening torque
M14 class 8.8	144 Nm

3. MAINTENANCE AND DISMANTLING

Stair maintenance activities consist of:

- Checking the tightness of the bolts;
- Checking the galvanisation and any rust spots;
- Checking the tension of the safety rope.

Any traces of dirt, oil or grease on the ladder (rungs and/or central section) or on the safety rope must be removed as they may cause the operator to slip and/or the safety device to malfunction.

For maintenance of the anti-fall safety device refer to “ANCHOR LIFE-LINE AND ANTI-FALL SAFETY DEVICE VERTICAL LINE 353-1 MANUAL” provided in attachment.

In order to comply with current environmental regulations, at the end of the lifecycle of the supplied product the owner of the goods shall dispose of the material in accordance with current regulations. The shaft and the ladder (as well as the accessories: footboards, fixing devices, etc.), are made of fully recyclable steel.



Anti-fall safety device called **VERTICAL LINE 353-1**



Compliant with Reg. UE/2016/425



SUMMARY

Warning / Recommendation / Guarantee / Delivery notes	Pag. 3
Description of devices	Pag. 4/5
Accessories	Pag. 6/7
Reference standards / Characteristics and technical data	Pag. 8
Load forces and marking	Pag. 9/10
Performance / Arrangement / Preliminary remarks prior to installation	Pag. 11/12
Instructions for use / Warnings / Recommendations / Limits of use / Checks before use	Pag. 13/14/15
Device installation example	Pag. 16/17/18/19/20
Instructions for periodic inspection / Expiry date / Storage and transport / Disposal	Pag. 21

RECOMMENDATION

Before using the **VERTICAL LINE 353-1** device, carefully read and make sure you have understood this manual/certifications in its entirety, fill in the usage log sheet and keep this user and maintenance manual for the entire life of the product.

GUARANTEE

The warranty period for the **VERTICAL LINE 353-1** device for damage caused to items other than the product and/or suffered by the product itself refers to the limitation periods of the regulations in force. In any case, the right to compensation for damage caused by the product cannot be exercised if **ten years** have already elapsed since the product was put into circulation, as provided for and regulated by Legislative Decree 206/2005, to which reference should be made for anything not expressly indicated in this paragraph.

Damage resulting from use that does not comply with the instructions in this manual is excluded from the warranty.

The unauthorised tampering/replacement of anchorage device components, the use of unsuitable and non-original accessories, elements or components, and/or the improper use of the system will void the warranty period and the manufacturer's liability, even in the event of accidents occurring for reasons not attributable to the modified and/or unsuitable and/or non-original component itself. The warranty obliges the manufacturer to replace, free of charge, at its premises, any components recognised as defective in terms of manufacture and/or technical performance.

DELIVERY NOTES

Upon receipt of the delivery, check that:

- The devices are intact and have not been damaged;
- The supply corresponds to the order specifications;


DESCRIPTION OF THE ANCHOR DEVICE

VERTICAL LINE 353-1 consists of a tensioned metal cable fixed at both ends (upper end with terminal art. T and lower end with tensioner art. TFF) and a guided anti-fall safety device art. DA.


The cable art. CVX8 is made of AISI 316 stainless steel called 133-wire CABLE (7 x 19).


The rigid anchor line (metal cable) can be applied to fixed support structures.

Support structures suitable for accommodating the **VERTICAL LINE 353-1** system must withstand a vertical force of 12 kN.

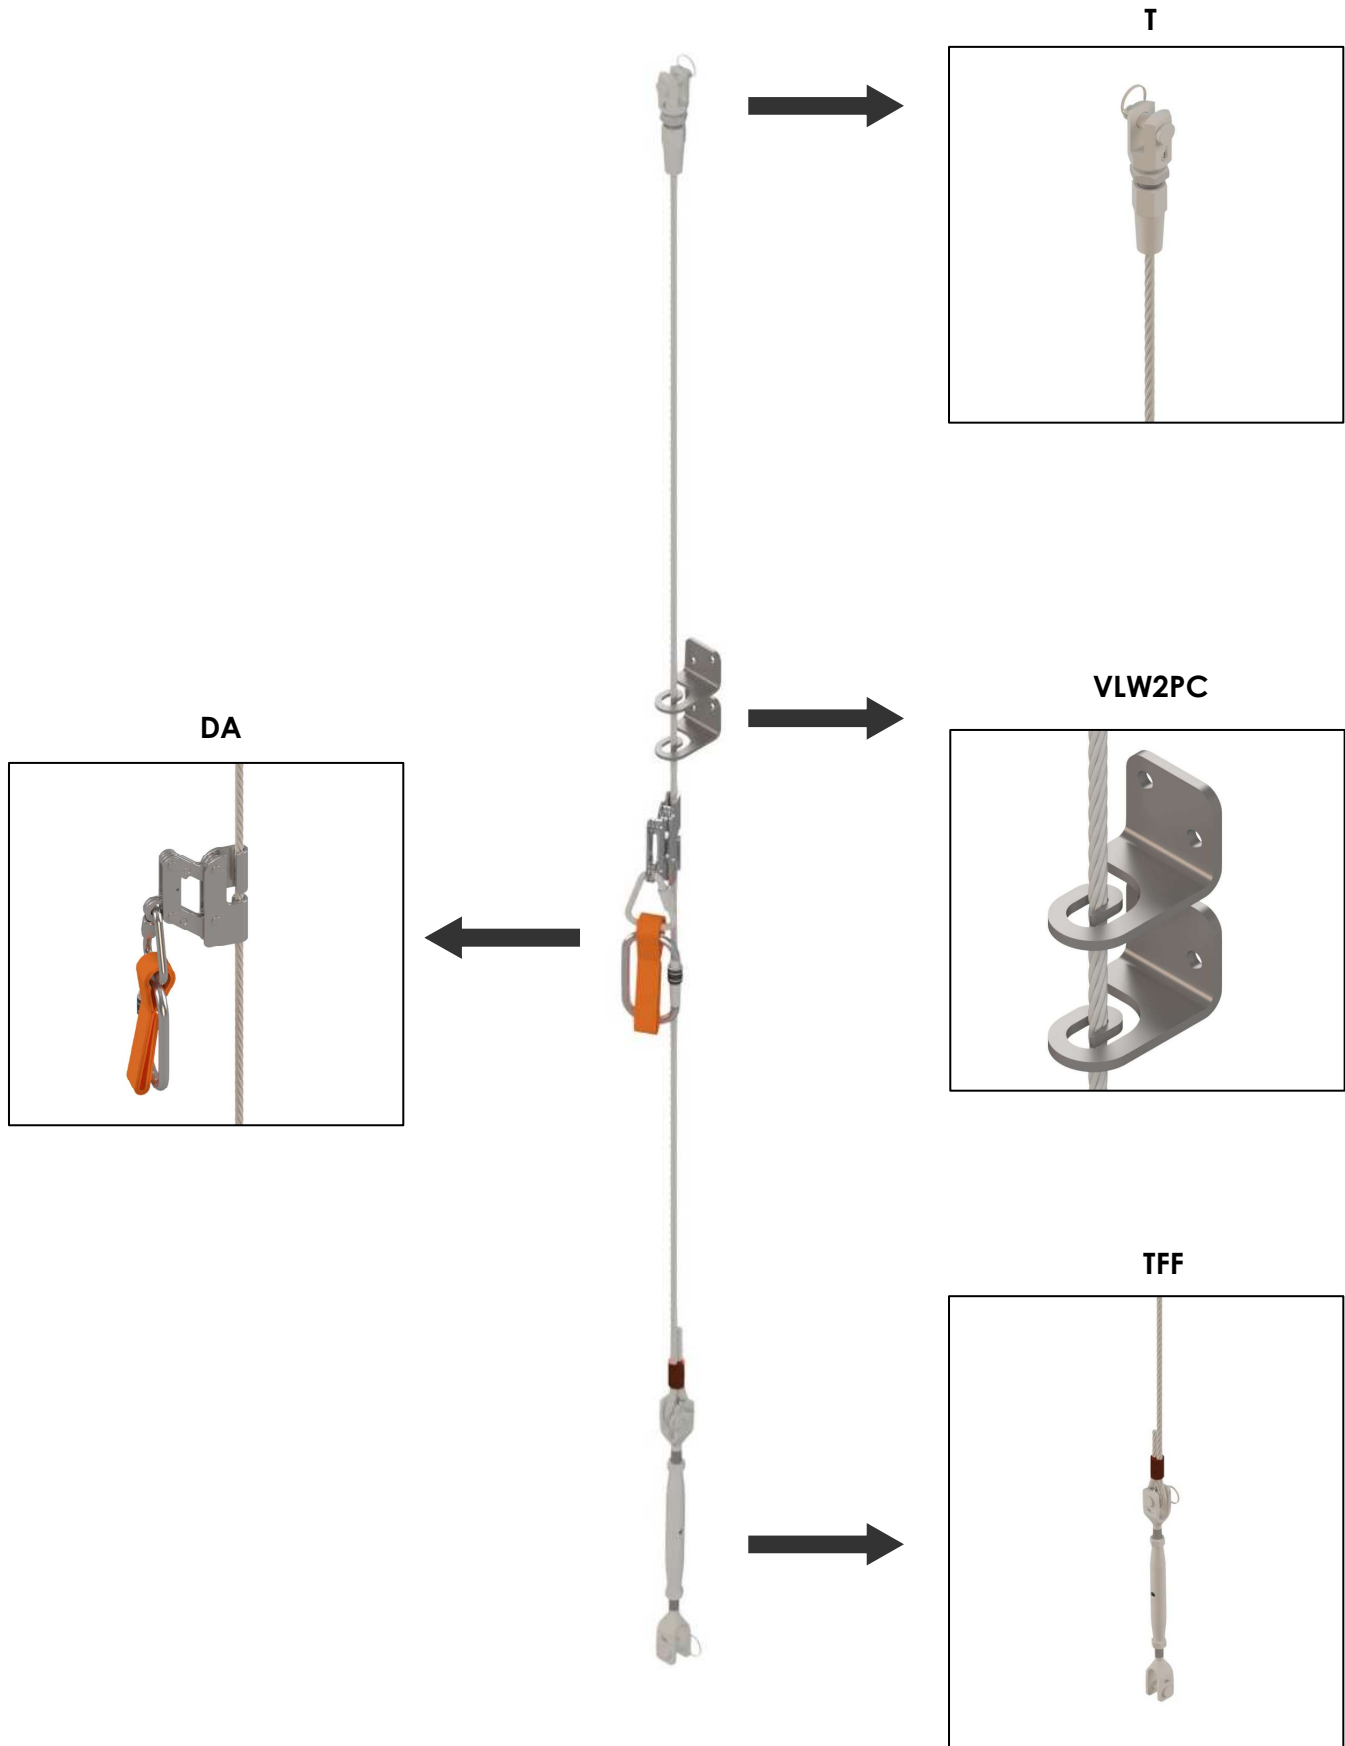

The device called art. **DA** is a guided device to be used exclusively on the vertical rigid anchor line (metal cable) «VERTICAL LINE 353-1» manufactured in accordance with Standard EN 353-1.

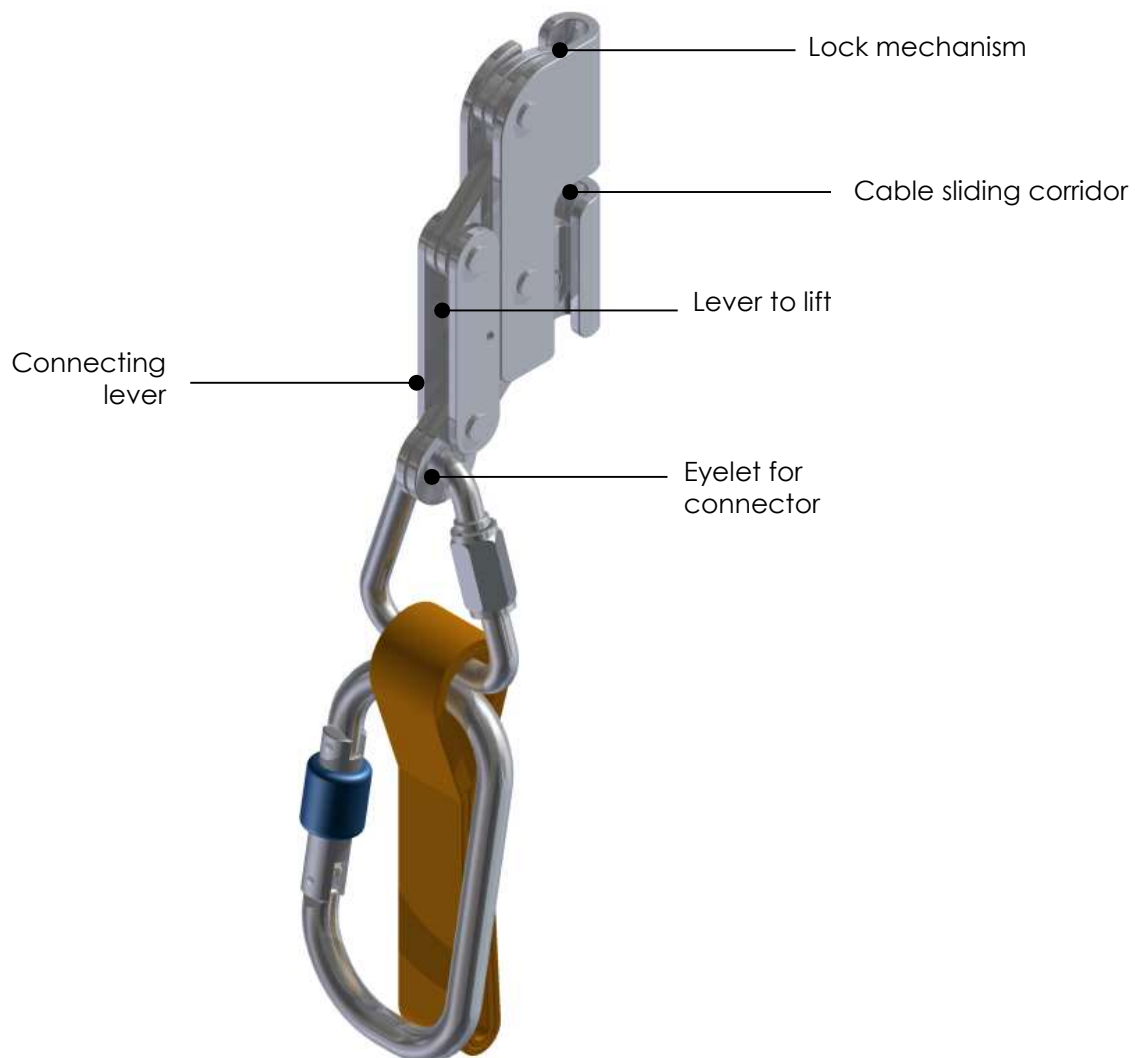

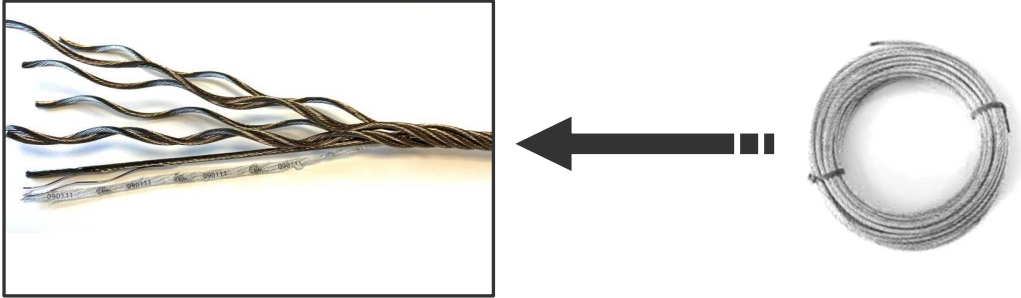	Item: CVX8 Description: Ø 8 mm cable called 133-wire and minimum breaking load of 36,40 kN. Function: rigid line (metal cable) between end and intermediate anchors, to which personal protective equipment (PPE) can be attached, consisting of: CVX8. Material: AISI 316 stainless steel.  WARNINGS! The anchor line is a guaranteed and certified system as a whole. In order for this to remain valid, all components must be original. To prevent the use of counterfeit cables with different characteristics, the cable has customised tracking inside it, which allows the originality of the piece to be traced. The use of a non-original cable, even for reasons not directly attributable to the cable itself, will void all warranties provided by the manufacturer. The cable is supplied according to the order and the length of the system. TECHNICAL DATA SHEET STAINLESS STEEL CABLE  Steel cable : STAINLESS. AISI 316 F.133 AM R.1570 N/MMQ SIAL SAFETY srl Nominal diameter of the rope (mm): 8 Winding: RIGHT CROSS Preformation: YES Construction: WIRES 133 AM – UNI EN 12385-4 standard N° of strands: 7 N° of wires per strand: 19 Core: METAL Resistance class. Wires kg/mm²: 160 N/mm²: 1570 Minimum breaking load : Kg = 3711,17 ; kN = 36,40 Surface protection: STAINLESS N.B. The cable must not be subjected to deformation or damage that could harm the wires it contains.
	Item: TS Description: End with ferrule loop, obtained by turning the end back. Loop formed at the end of the rigid line (metal cable) and secured by means of a cold-pressed ferrule on the rigid line (metal cable). Function: secure attachment device created at the end of the rigid line (metal cable) that allows connection to anchoring devices. Materiale: stainless steel redance; copper ferrule and stainless steel cable.
	Item: T Description: Conical manual terminal with symmetrical wedges, equipped with pin and fork for creating ends. Function: secure attachment device created at the end of the rigid line (metal cable) that allows connection to anchoring devices. Material: Stainless steel.
	Item: TFF Description: Closed cannula tensioner with two fixed cut forks. Function: For anchoring and tensioning the cable (minimum value not less than 0.25 kN) to the end anchorage. Material: Stainless steel.


	Item: DA Description: guided device to be used exclusively on the rigid anchor line (metal cable) in the VERTICAL LINE 353-1 system, compliant with EN 353-1 standard. Function: provides the operator with an attachment point for a harness and allows them to climb up and down safely, preventing accidental falls. Material: stainless steel The CE marking logo is engraved on the product (see figure on the side). The CE marking certifies that the VERTICAL LINE 353-1 system complies with the essential safety requirements of EU Reg. 2016/425.
	Item: VLW2CP Description: intermediate anchorage pair of the rigid anchorage line (metal cable) Function: intermediate device to be applied to existing ladders to ensure their safety for sections longer than 10 metres. Material: Aluminium.

DM 17/01/2018	Technical Standards for construction
UNI ENV 1993-1-1	Eurocode 3
UNI ENV 1993-1-4	Eurocode 3
UNI EN 353-1:2018	Personal protective equipment against falls Guided anti-fall safety devices including a rigid anchor line (metal cable)

CHARACTERISTICS AND TECHNICAL DATA art. DA

N ° of users per anti-fall safety device art. DA	Max 1 user weighing 140 Kg including equipment Min 1 user weighing 50 kg
Material, external part	AISI 420 B stainless steel
Unitary load at yield point	$f_{yk} = 650 \text{ N/mm}^2$
Unitary tensile breaking load	$f_{tk} = > 850 \text{ N/mm}^2$
Elongation at break	$\geq 10 \%$
Material, internal part	AISI 304 stainless steel
Unitary load at yield point	$f_{yk} = 220 \text{ N/mm}^2$
Unitary tensile breaking load	$f_{tk} = 520 \text{ N/mm}^2$
Elongation at break	$\geq 20 \%$

Load conditions for verifying the structural suitability of the support.
The support structures designed to accommodate the
VERTICAL LINE 353-1 system
must be able to withstand a vertical force of 12 kN.
(Minimum tension on the cable not less than 0,25 kN)

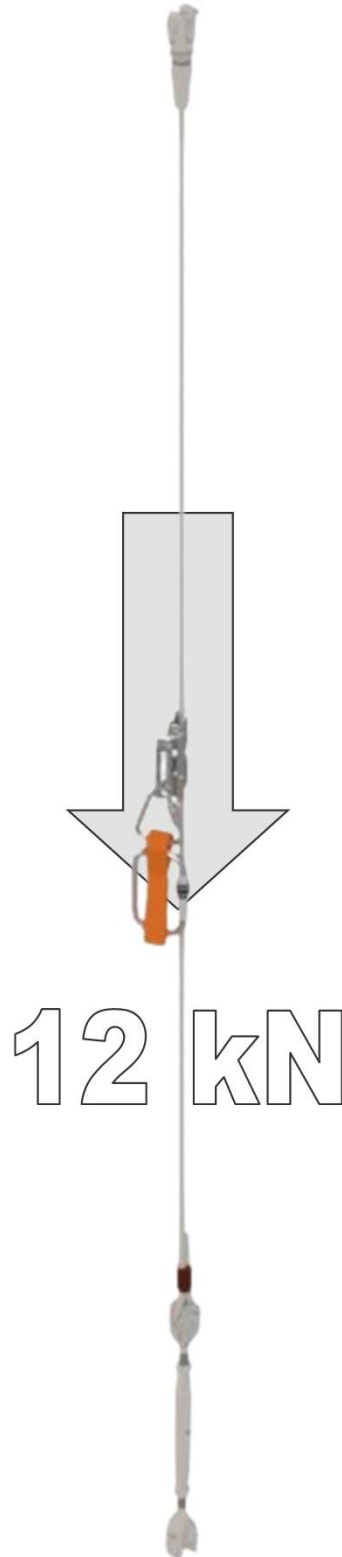


$F = 12 \text{ kN}$ = load force at ultimate limit state

Marking description:

On each component art. DA you will find the marking shown on the side.


- 1) Direction of use
- 2) Manufacturer
- 3) Item
- 4) Notified body for issuing CE marking
- 5) Reference standards
- 6) Compatible anchor line
- 7) Number of users and min. and max. weight
- 8) Serial number
- 9) Read information note
- 10) Batch

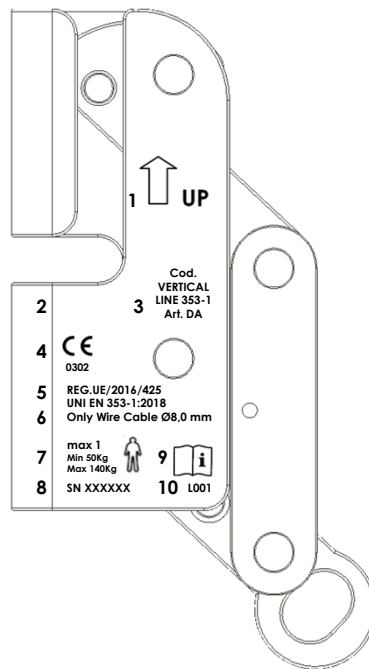

Marking description:

Each component art. T is engraved with the marking shown on the side.

- 1) Manufacturer
- 2) Item code
- 3) Production batch
- 4) Read information note

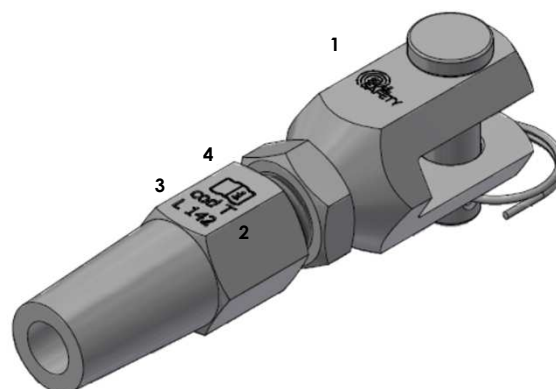

Marking description:

Each component art. TFF is engraved with the marking shown on the side.

- 1) Manufacturer
- 2) Item code
- 3) Production batch
- 4) Read information note



Marking description:

Each component art. VLW2CP is engraved with the marking shown below.

- 1) Item code
- 2) Production batch
- 3) Read information note

1 cod VLW2CP

2 L100 3 

**PERFORMANCE**

For each **VERTICAL LINE 353-1** anchorage device, it is assumed that **no more than n° 1 operator** weighing a maximum of 140 kg each, including equipment, and a minimum of 50 kg each, will be attached, connected via an EN 361 harness to the DA device, which in turn is connected to the rigid anchorage line (metal cable).

ARRANGEMENT**Indications for correct arrangement:**

The positioning of the **VERTICAL LINE 353-1** device must be designed and/or approved by a qualified technician who is also responsible for assessing the risks of falling from height in order to reduce and/or eliminate occupational hazards. All in accordance with UNI 11158 and UNI 11560 standards and/or applicable regulations.

- The **VERTICAL LINE 353-1** anchor device may only be used in a vertical position $\pm 1^\circ$.
- The end of the **VERTICAL LINE 353-1** anchoring device is marked by a copper ferrule crimped onto the cable, with a minimum cable tension of no less than 0,25 kN.
- The anchoring device must be used in compliance with current safety regulations (Legislative Decree 81/08) for the user. The manufacturer accepts no responsibility for any accidents resulting from failure to comply with these regulations and the instructions contained in this information note.
- The user must be fully aware of how the anchoring device works before starting work and must therefore carefully read the information note provided before use.
- This information sheet is to be considered an integral part of the anchorage device supply; if it is damaged or illegible in any part, a copy must be requested immediately.
The instructions for use and maintenance must be constantly available at the place of use.
- If the product is exported, the retailer must provide this information sheet translated into the language of the country in which it is marketed.
- The device is designed for use in environments where the temperature is between -30°C / $+40^\circ\text{C}$.
- The functioning and effectiveness of the anchoring device is dependent on its correct use.
- The employer (or client) must, in compliance with Legislative Decree 81/08 and subsequent amendments and additions and/or current regulations, instruct personnel assigned to work on the roof on the risks of accidents and the safety devices provided, ensuring immediate rescue in the event of a fall.
- The anchoring device must only be used by users authorised by the employer and/or client who have fully read and understood the instructions contained in this information note.
- The operator must not use the device during medical treatments or administration of drugs that could alter their mental, physical, cognitive or sensory abilities.
- The device is designed for use by one worker.
- The worker should ensure that the distance required and necessary to arrest the fall does not exceed the distance available on site. The operator must have at least 2 metres of unobstructed space below their feet. For the first 2 metres of ascent from the starting level, the operator is not protected from the risk of impact.
- This anchoring device can be used in restraint, work positioning, fall arrest and rescue systems. Before each use of the anchoring system, a suitable and specific safety plan must be drawn up as indicated in point 4.4 and subsequent amendments of the UNI 11560 standard.
- In rescue systems, the maximum number of operators (including rescuers and rescued persons) must not exceed the maximum number of operators permitted on the system.
- When using the anchorage device and depending on the type of work to be performed, the user must wear the appropriate PPE for the task. For example: a harness compliant with Standard EN 361, lanyards compliant with Standard EN 354, carabiners compliant with Standard EN 362.
- The anchoring device can be used in conjunction with various types of connection devices (e.g. retractable fall arresters, lanyards and guided devices). The risk assessment technician will be responsible for evaluating the most suitable device based on the type of technical system used to prevent falls from height and the product's technical data sheet.
- Before and during use, consideration should be given to how a rescue could be carried out safely, efficiently and effectively in order to deal with any emergencies that may arise during the work. Remaining suspended or immobile for more than a few minutes while using an EN 361 harness can cause serious physical problems or death.
- Avoid handling in areas where PPE could come into contact with sharp surfaces.
- The manufacturer accepts no responsibility for damage resulting from: incorrect installation, use of non-original parts not specified in the information sheet, failure to carry out periodic inspections and appropriate checks on the device before use in accordance with current regulations.
- The tests/reports carried out by the manufacturer are illustrative and not exhaustive, as there are many variables (e.g. base material) that can affect the performance of the anchoring devices.

- Do not make any modifications to the anchoring device without the written authorisation of the manufacturer.
- The anchoring device must only be used for the purposes for which it was designed and manufactured, in accordance with the conditions indicated in this information note.
Unauthorised tampering/replacement of components, improper and incorrect use could cause damage to the health and safety of the user and invalidates the manufacturer's liability.
- The manufacturer also accepts no responsibility for accidents that may occur to users as a result of manoeuvres not provided for or not recommended in this information note.
- In the event of deformation and/or damage to the device components, they must be repaired or replaced.
- Any replacement of device components must be carried out by the manufacturer itself or by authorised qualified personnel.




CHECKS BEFORE USE

It is essential to check before each use that:

- The PPE used to connect to the system must be intact and the seams must not be loose or frayed, and there must be no signs of wear, cuts, deformation or abrasions. Check that the metal parts show no signs of corrosion or deformation and test that the fastening mechanism works correctly.
- The anchoring device must not show any signs of breakage or wear.
- The fall arrester is not deformed and/or broken.



It is essential that use of the anchorage device be immediately suspended if, upon checking it before use, the operator has any doubts about its safe condition and/or when the anchorage system has suffered a strong impact due to the arrest of a fall. In such cases, the system cannot be used until written confirmation has been received from a competent person certifying that it is once again fit for use. Failure to perform the appropriate checks and improper use of the anchoring system may result in injury, wounds or death. In this case, the manufacturer or distributor shall not be liable for any damage, injury or death.



WARNING: use **VERTICAL LINE 353-1** exclusively on support structures that are in good condition and capable of supporting the required loads.

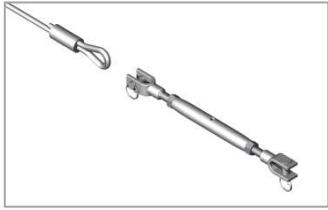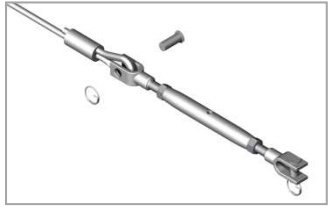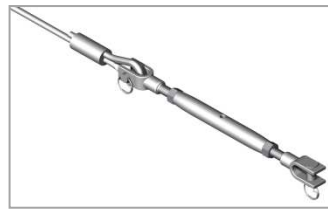A Remove the split pin attached to the fork pivot and insert the end of the cable with the ferrule loop obtained by turning the end back into the tensioner fork.		B Insert the locking pivot.	
C Insert the safety pin into the appropriate hole. Remove the safety pin and the corresponding pivot at the other end of the fork and insert it into the lower support structure designed to accommodate the SICURSCALE® VERTICAL LINE 353-1 system, positioning the pivot from top to bottom and leaving the pin below the pivot.		CORRECT EXECUTION	

MANUAL CONICAL FORK TERMINAL INSTALLATION


Reference for cut 	Note: the cable will be longer than the ladder. The cable must be cut to size before inserting the conical fork terminal. • Once the entire structure has been assembled, attach the fork tensioner to the base of the ladder and insert the end of the cable with the eyelet ring nut. • Unroll the entire cable, placing it over the ladder previously attached to the pole. • Mark the cable with a marker as shown in the figure. • Cut the cable with a cutter.
---	---

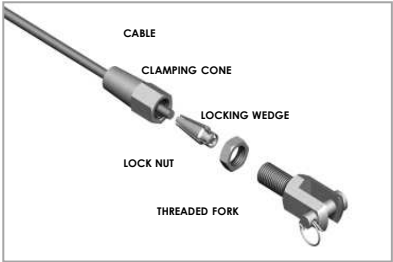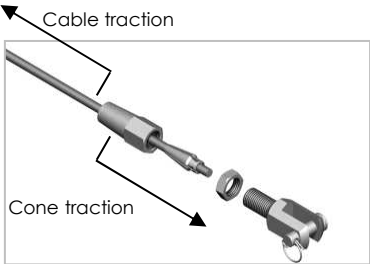A Disassemble the manual conical fork terminal.	1  2 	B Insert the cable into the clamping cone.	
C Insert the cable into the locking wedge and make sure that the cable protrudes by approximately 10/12 mm (To facilitate this cable insertion operation, it is possible to slightly widen the wedges that make up the locking wedge).		D Manually apply pressure to the 4 previously widened wedges, bringing them into contact with the cable.	

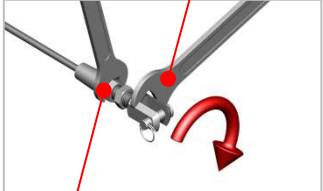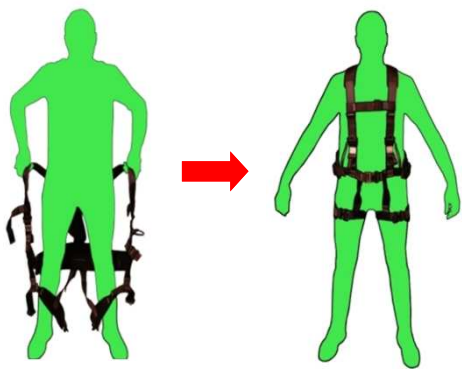E Manually pull the cable and the clamping cone in opposite directions so that the two fit correctly.		F Screw the fork terminal onto the clamping cone using a 30 mm open-end wrench. Fork wrench that prevents possible axial rotation of the cable and wedges (please note that the clamping cone must remain fixed and the fork terminal must be screwed onto the clamping cone) until the end of stroke is reached.	Open-end wrench for tightening the fork terminal  Fork wrench that prevents possible axial rotation of the cable and wedges
G Lock the lock nut tangentially to the clamping cone using two 24 mm open-end wrenches.		H CORRECT EXECUTION	
I Remove the safety pin and hook the terminal into the lower support structure designed to accommodate the SICURSCALE® VERTICAL LINE 353-1 system. Lock the terminal by positioning the pivot from top to bottom, leaving the split pin below the pivot.		J CORRECT EXECUTION	
K Wear the harness that complies with EN 361 standard, ensuring that the belt straps are snug against the body (as shown in the sequences on the side). Equip yourself with a suitable connection, compliant with current regulations, to the guided anti-fall safety device art. DA based on the types of work to be carried out at height.	 1 2		

A

Hold the DA device with the arrow pointing upwards (as indicated by the pictogram marked on the DA device)

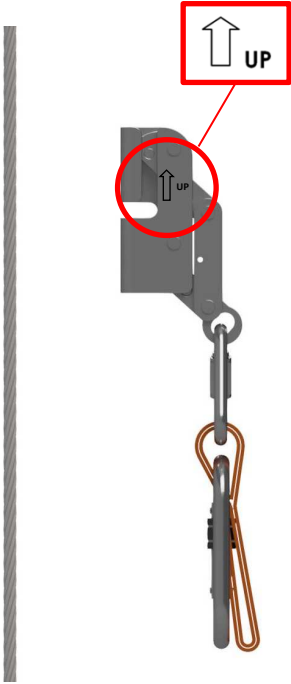

B

Move the DA device lever upwards.



C

Rotate the DA device 90° to the right.



D

Insert the DA device onto the cable.




E

Return the DA device to the vertical position by rotating it 90° to the left.



F

Check that the arrow on the DA is pointing upwards.

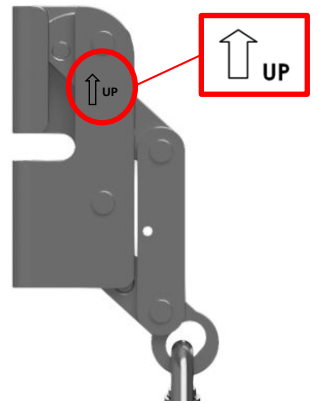

G

Perform a functional check of the DA device on the cable by grasping the carabiner and pulling it downwards, checking that the entire device locks onto the cable.



CORRECT EXECUTION

(Warning: the only permitted and authorised installation method is that illustrated in the steps above. It is therefore prohibited to install the DA guided device on the cable without following the exact instructions above.)



WRONG INSTALLATION

(Please note: the arrow pictogram points downwards, indicating that the installation is incorrect, as shown in the image on the side).



A

Take the DA device and lift the lever upwards.



B

Rotate the DA device 90° to the right.





C

Remove the DA device from the cable.



CORRECT EXECUTION

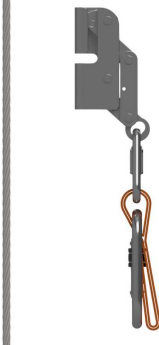

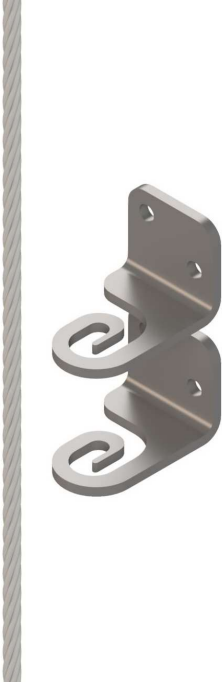A Take the VLW2PC component and attach it to the support structure designed to accommodate the VERTICAL LINE 353-1 system.		B Take the tensioned stainless steel cable and insert it into the appropriate housings.	
C CORRECT EXECUTION			

A

Arrive with the guided anti-fall safety device art. DA under the intermediate part of the VERTICAL LINE 353-1 system art. VLW2PC.



B

While remaining attached to the DA device, remove the stainless steel cable from the VLW2PC intermediate housing.




C

At this point, pass the guided device art. DA over the intermediate art. VLW2PC. Once this operation has been completed, reinsert the stainless steel cable into the housings of the intermediate art. VLW2PC.



D

**CORRECT
EXECUTION**

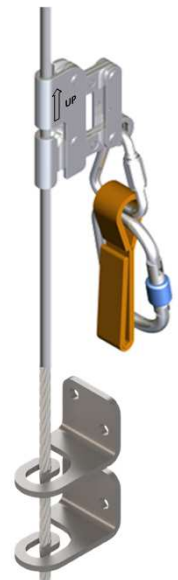

INSTRUCTIONS FOR PERIODIC INSPECTION

The guided anti-fall safety device art. DA must undergo regular periodic inspections, as user safety depends on the continued efficiency and durability of the guided anti-fall safety device art. DA and its equipment.

Below is a checklist to use as a guide for performing periodic inspections correctly:

- 1 periodic inspections must be carried out by competent persons authorised by the employer
- 2 check that there are no signs of corrosion
- 3 check that there are no worn parts
- 4 Check that there are no cracks, sharp edges and/or sharp parts on the guided anti-fall safety device art. DA that could cause cuts or abrasions to the cable (rigid anchor line (metal cable)) during use of the anti-fall system
- 5 check the condition of the tensioner and terminal
- 6 check the movement of moving parts and locking devices
- 7 check the presence and legibility of markings, serial references and batch numbers
- 8 system components that have defective parts or are in poor condition must be taken out of service.

The risk assessment technician appointed by the client has the right to decide to limit the frequency of periodic inspections in relation to specific conditions such as, for example: presence of chemical and corrosive agents, frequency of use, presence of extreme or adverse environmental conditions, etc.

For original replacement parts, contact the manufacturer or authorised dealer.

EXPIRY DATE

No expiry date for the product

If regular periodic inspections are carried out

TRANSPORT – STORAGE AND WAREHOUSING

The product must be stored and kept in a dry place away from direct sunlight.

Keep away from heat sources, sharp edges, moisture, corrosive agents or other elements that could cause damage and unexpected stress to the device, ensuring that the product is not stored for long periods under the pressure of weights that could cause damage.

If necessary, equipment must be dried with air at room temperature before storage.

DISPOSAL AND DEMOLITION

For the disposal and partial or complete demolition of the anchoring device, the purchaser must comply with the regulations in force in their country of residence.